

Hot Air Oven

SOP for Hot Air Oven

1. Set the oven to the desired temperature.
2. For setting temperature of oven.
Press on ON/OFF button. Adjust using the rotary knob. Set the adjustment on the knob.
3. Do not keep the oven door open for long time.
4. If you are handling with samples in oven, keep the door open.
5. Make the oven cool.

HOT AIR OVEN

Temperature

°C

ON/OFF

TEMPERATURE

TEMPERATURE

TEMPERATURE